

All models

## Types of grease and quantities

Model	Grease type	Quantity in hub-cap (up to flanged edge)
100	Roller Bearing Greases refer to „Specifications für Service Products“ page 265.1	
107, 108, 109, 111, 113, 114, 115	Roller Bearing Greases or Multipurpose Greases refer to „Specifications for Service Products“ page 265 or 267	approx. 20 g
116, 123		approx. 15 g


## Special tool

Removal and re-fitting device for hub-cap



116 589 22 33 00

- Using special tool to remove hub-cap from front wheel hub.
- Remove old grease from hub and hub-cap.

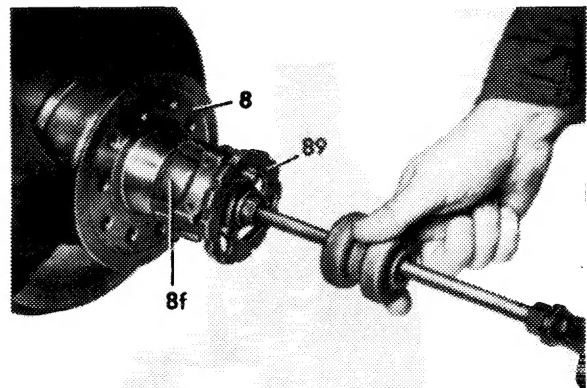


R33-5797

8 Front wheel hub  
8f Hub-cap

89 Special tool for removal and  
fitting of hub-caps

- Refill hub-cap with anti-friction grease up to the flanged edge.
- Replace hub-cap using special tool.

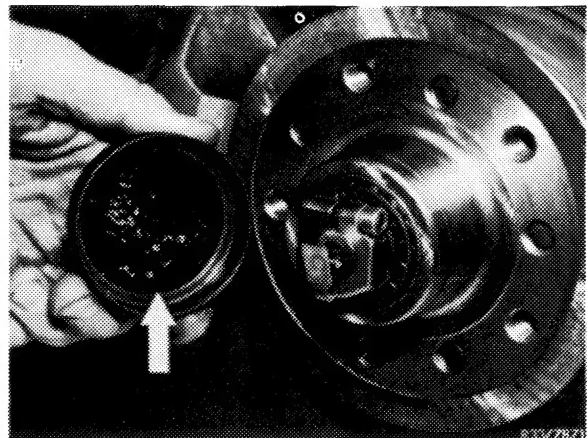

833/7873